



Complete Your Halloween Scene With All of Tekky Toys' Animated Products! go to: www.tekkytoys.com

# HAUNTED DOORBELL

## Use With Your Doorbell

- 1. Place the black box on top of your existing doorbell chime (the rectangular box that makes your doorbell sound). Be sure the end of the black box, with the white sticker, is placed DIRECTLY on vour doorbell's chime. (see illustration A)
- 2. Turn switch to the "ON" position.
- 3. Ring your doorbell. (If sound doesn't play, try moving the black box to a different position on your doorbell's chime).

illustration A

not stable on your chime

# Or, Use Anywhere! (optional motion activation)

- 1. Place black box anywhere with the motion sensor hole (on front) facing the direction where the movement will occur.
- Turn the switch to "motion" setting.
- Wave your hand in front of the sensor to test.

#### Saftey Warning:

Remove all plastic fasteners and tags.

These are part of the packaging and should be discarded.

#### **NOTICE REGARDING BATTERIES:**

This product may be shipped with batteries for in-store demonstration purposes ONLY.

Tekky Toys does NOT guarantee the life of any batteries used for demonstration.

Tekky Toys recommends the consumer REPLACE any demonstration batteries present with fresh cells to ensure proper operation and enjoyment.

# Warning

This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 14 years of age and older. Not intended for use by children 13 years of age and younger.



Do Not Return This Item To The Store!

If you are experiencing technical difficulties please go to www.tekkytoys.com for assistance.

### **BATTERY INSTRUCTIONS AND CAUTIONS:**

 
- -Use only the batteries recommended. -Remove batteries when not in use.
- -Do NOT use rechargeable batteries.
- -Be sure to insert the batteries with the correct polarity +/-. -Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium.
- -Always dispose of exhausted batteries properly.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

ALL NEW MATERIALS SURFACE WASHABLE ONLY.

HAUNTED DOORBELL is a trademark of Tekky Toys. Copyright © 2008 Tekky Toys. All Rights Reserved. MADE IN CHINA.

This item requires 2 'AA' Batteries, included for demo purposes only.



Item #56216 Haunted Doorbell™

